

Technical Data Sheet

MINI



General description

- Small and handy transmitter for standard applications and customized solutions
- Easily operated with one hand
- 6 functions maximum, start and stop
- Range of application: industrial applications, vehicle technology, agriculture, forestry etc.
- Stop button, LED status display, push buttons, easy to wear with its belt clip, carrying bag
- Available with internal antenna
- Special battery compartment for the use of commercial batteries
- Immediately ready for operation



Control functions and accessories

- ① Start button
- ② Stop button
- ③ Push button
- ④ LED status display
- ⑤ Option: battery charger with HETRONIC battery (Original parts set of HETRONIC)



Technical Data Sheet

Safety check

Attention: You have to read and understand the operating manual of the radio remote control and the machine before operation is started!

Check the proper operation of the **stop button** before operating the machine.

Please check the following items each time before using the system!

- Check the transmitter for damages
- Check the function of the stop button by means of the LED status display ④
(transmitter ON: LED is flashing green / stop button pushed: LED is flashing red, transmitter off)

Operation of the transmitter

The transmitter may only be operated by introduced persons!

Insert a fully charged battery into the battery compartment of the transmitter.

Start the transmitter by using the **start button** ①. Now, the **LED status display** ④ is flashing green.

After the system check you may start the system by activating the **start button** ①. You can control the designated function by activating the **push buttons** ③. The activated functions are now transmitted to the receiver. The individual functions of the buttons are described in the enclosed drawings! You can stop the system using the **stop button** ② (only use in case of an emergency).

LED status display: Flashing green = transmitter activated

Flashing red/green = low voltage of the transmitter

Flashing red = transmitter stopped

Technical data

Dimensions

Material	Polyamid with glass fibre
Weight	220 g
Dimensions	(H1)125 / (H2)225 / B 69 / T 50 mm
Diagnostics	Status LED
RF technology	Synthesizer
RF output	< 10 mW
Temperature range	-25° up to +70° C
Antenna	external or internal
Frequency range	434/869 Mhz (for EU, further frequencies on request)
Safety address	20 bit (1 Mio.)
Protection type	IP 65
Operating time	more than 20 h possible
Power supply	3,6 V DC

